

Since 1963

COMMAX
Smart Home Security

User Manual

CIOT-1020M



www.commax.com

COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Contents

Safety Warning & Caution	2
1. Main funciton	4
Basic Screen Configuration	7
2. Home Screen	10
Home Area	10
2.1. Editing a space list	11
2.2. Registering a device	12
2.3. Placing device (move / delete)	15
2.4. Controlling devices	18
2.5. Widget area	18
3. House Reporter	20
3.1. Edit house reporter	20
3.2. Setting the weather area	20
4. Control	22
4.1. Control lighting	22
4.2. Multi-sensor	23
4.3. Magnetic sensor	23
4.4. Adding devices	24
4.5. Edit device	25
5. Application	26
5.1. Interphone	26
5.2. Door entrance	27
5.3. Call log	29
5.4. security	30
5.5. Checking visitor	33
5.6. Etc App	35
5.7. Setting the Wall Pad	39
6. Scene / Booking Control	49



Safety Warning & Caution

Please follow the things described below in order to prevent any danger or property damage.



Warning

It may cause a serious damage or injury if violated.



Caution

It may cause a minor damage or injury if violated.



Prohibition.



No disassembly



No touch



Must follow strictly.



Shows plugging out the power cord without an exception



Shows the warning and caution for an electric shock.



Shows the warning and caution for a fire.



Warning

Please don't use several products at the same time on one power socket.


- It may cause a fire due to an abnormal overheating.



Prohibition Fire

Please don't bend the power cable excessively or it may cause an electric shock.

- fire when using a damaged power cable.

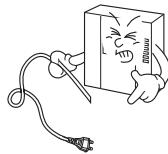

Prohibition Electric shock Fire

Please don't handle the power cable with a wet hand.


- It may cause an electric shock.



Prohibition Fire

Please plug out the power cable from the socket when not using it for a long period of time.


- It may shorten the product lifespan or cause a fire.

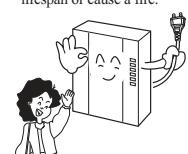

Request Fire

Please don't install the product in the place where there is much oil, smoke or humidity.


- It may cause an electric shock or fire.

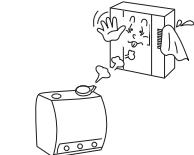

Prohibition Electric shock Fire

Please don't install the product with the lightning and thunder.

- It may cause an electric shock or fire.

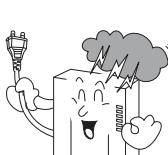

Prohibition Electric shock Fire

Please don't use and connect this product with other products with different rated voltage.


- It may cause a disorder or fire.



Prohibition Fire

When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.

- It may cause a fire due to the increased internal temperature.

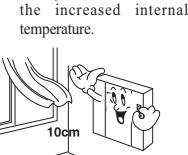


Prohibition Fire

Cleaning & Use

Warning

Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed).

- It may cause an electric shock or fire.

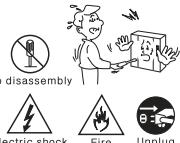

No disassembly


Electric shock

Fire

Unplug

If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

- It may cause an electric shock or fire.

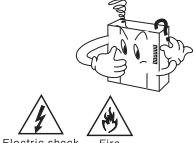


Electric shock

Fire

Please don't insert any metallic or burnable materials into the ventilation hole.

- It may cause an electric shock or fire.

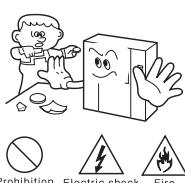


Prohibition

Electric shock

Fire

Please use only the designated batteries for the products of using DC power.

- It may cause an electric shock or fire.

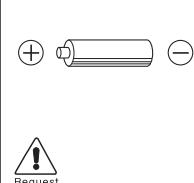


Request

Power & Installation

Caution

Please plug the power cable firmly into the inner end

- It may cause a fire.

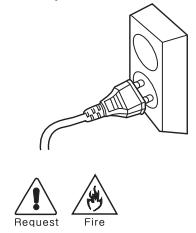


Request

Fire

Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the cable).

- It may cause an electric shock or fire

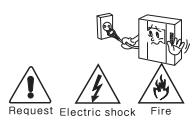


Request

Electric shock

Fire

When connecting the power cables after cutting the cable, please install the product with power off

- It may cause an electric shock or fire

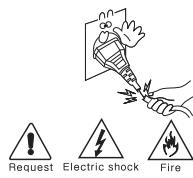


Request

Electric shock

Fire


When installing the product, please fix it firmly while using the wall-mounting unit and screws.

- It may cause an injury from the falling object.

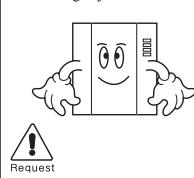

Request

Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.

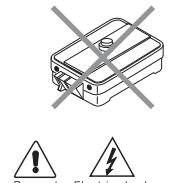


Request

Electric shock

Please check the use voltage and current for the DC-only products and use the appropriate rectifier.

- It may cause a fire.

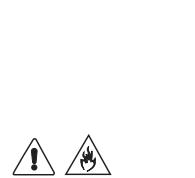


Request

Fire

Please avoid direct rays of the sun or heating devices at a time of installation.

- It may cause a fire.

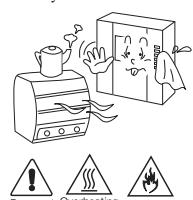


Request

Overheating

Fire


Please don't install the product on an unstable place or small support board.

- It may cause an injury if it falls down while in use.

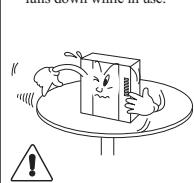

Request

When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)

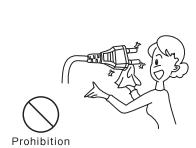

Prohibition

Please don't drop the product on the ground and don't apply a shock.

- It may cause a failure.



Prohibition

Please use the designated connection cable within the maximum calling distance designated for the product

- It may reduce the product performance.



Request

Start

1 Main function

Function	Description
COMMAX Widget	Display of widget type such as today's weather, indoor temperature and humidity, smart plug electricity amount, absence information
Login and Membership	User subscription and login to use UC and Cloud
My Reporter	To view and set the integrated value information provided by the app
COMMAX launcher	Support for space control / editing / addition to the main screen and main functions (weather, quick menu, household device information, individual device control)
Scene control	It is main functions that can display basic values (away, burglar), appear user-specified scenes, and register new scenes and delete
My house coach	Offer various lifestyle tips to users by apps
Device control	Function to control a wireless device that works with wall-pad
Apps	Show all apps that are registered in the wall-pad
Door call / recording	Video call with IP door and recording function through IP network
House to call	Call between household and another household through IP network
Lobby call / recording	Video call to lobby and recording function by IP network
Guard call	Voice call to guard station by IP network
Call list	Checking the call list and recorded video of lobby phone and IP Door

CCTVlive view/ recording	Real-time and CCTV video monitoring service Function to display and record multiple images on two or more monitors
CCTV video recording view	Check recorded CCTV images by date
Security function	Using wireless IoT sensor (magnetic, PIR) to away, burglar, emergency handling
Scenario Control	Multi-control function for device by user condition
System management	Manual setting of the basic environment (IP setting, etc.) by the user
Automatic device registration	User can register interlock device (IP Door, CCTV, IoT device, etc.)
COMMAX Setting	IP and various environment setting for lobby call and system operation
Mobile call	Calls to mobile phones login ID same as wallpad
Video streaming server	Format reset function to send CCTV / Door image to external (UC)
Cloud server	Wall pad control by smartphone through cloud server
Notification	Function to notify emergency from your house to mobile phone


- Interlocked mobile phone

(Smart devices are compatible with Android OS (4.4.1 or later), iOS (.0 or later)

OS	Resolution	Mobile phone
Apple	1136x640	iPhone5s
	120x100	iPhone6
	1334x50	iPhone6s
	120x100	iPhone6 Plus
	1334x50	iPhone


Android	1 20x10 0	Nexus5x
	204 x1536	Nexus
	2560x1440	alaxy Note 4
	2560x1440	alaxyS5 edge
	1 20x10 0	alaxyS4
	2560 x 1440	L 3 cat6
Total		11ea



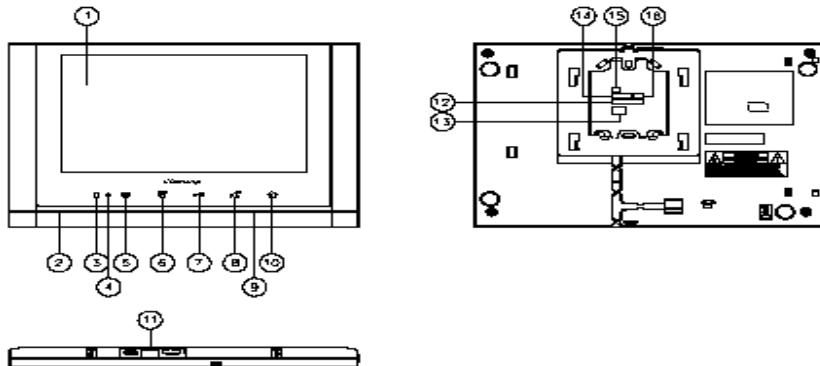

No.	CONTENTS	No.	CONTENTS
1	Touch screen	9	MIC
2	SPEAKER	10	HOME
3	CMOS	11	POWER S/W
4	POWER LED	12	SENSOR(OPTION)
5	EMERGENCY	13	PoE
6	GUARD CALL	14	RS-485(OPTION)
7	Door Release	15	Door Release(OPTION)
8	DIAL	16	

Basic Screen Configuration

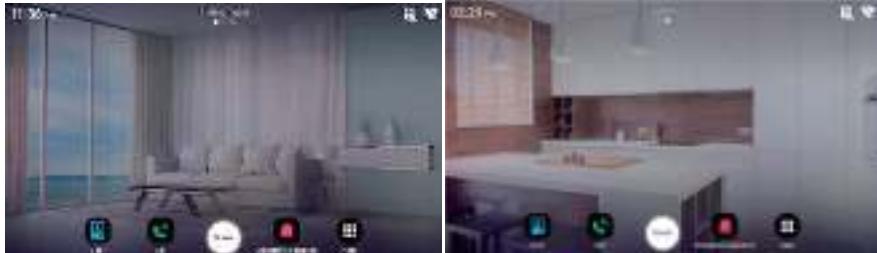

The moving of screen for using scrolling

The screen change

The navigation bar of home screen bottom



	o to home screen		o back
	Volume control		

Go to Setting

Home screen bottom setting bar



	o to system wireless WiFi setting
	o to wired network IP setting
	Check the status of external Internet connection
	o to IP Door Camera registration

 Sign up registration	User	o to user registration
 IoT device registration	IoT Device	o to IoT device registration
 Wall pad settings	Wall pad	o to wall pad setting
 OS setting	OS setting	o to OS setting

2 Home Screen


Home Area




 View the door camera	View the door camera
 dial	Dial key for call
 Device status	Door, network, membership status display * Icons are displayed during abnormal operation
 All Apps	All App list
 Scene control	Scene and Reservation control
 Emergency button	User Emergency button

2.1. Editing a space list

- 1) Press an empty space on background screen for one second.

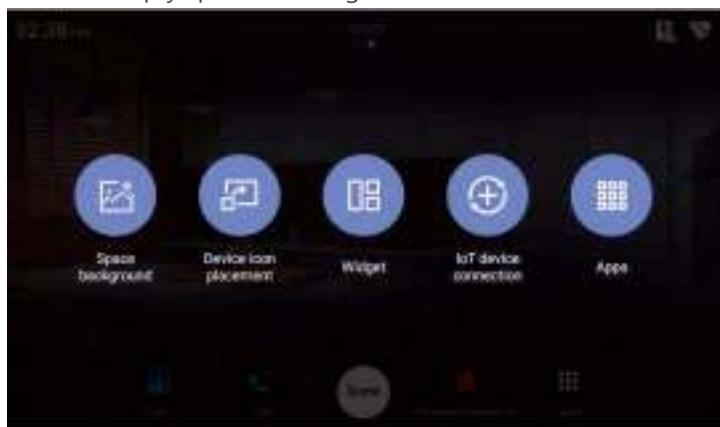


- 2) Drag the space you want to move and move it to the desired location
- 3) Press the "X" button to delete the space.
- 4) Press "+" button to add space
- 5) Press the Cancel button to cancel editing.
- 6) Press the 'complete' button to save the space list.

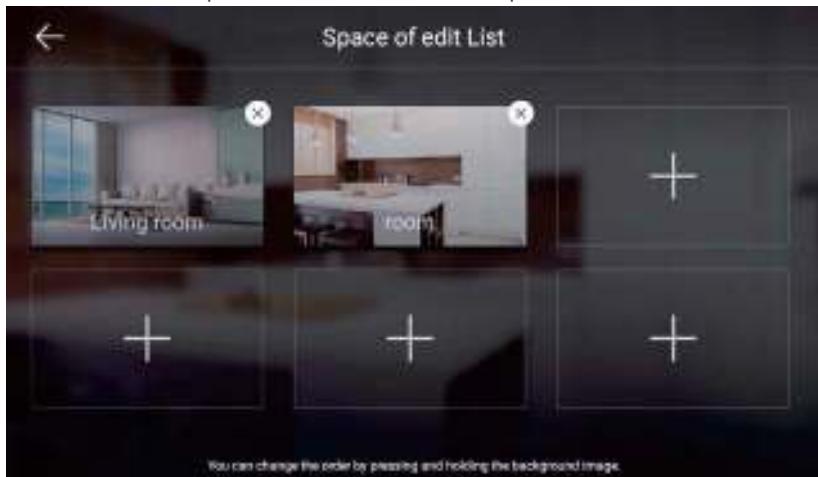

Adding Space

- 1) Enter the name of the space.

- 2) Press "Enter" on the keyboard.
- 3) Select a space image .
- 4)  'Press 'OK' button to add space.'
- 5)  'Previous' button will move to previous screen

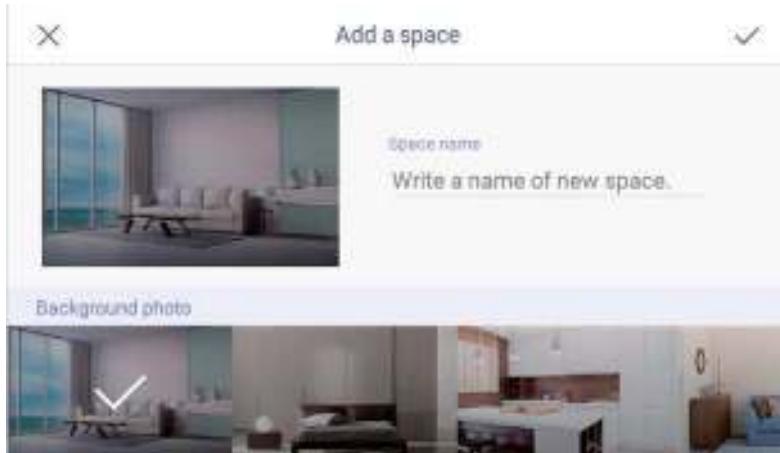


2.2. Registering a device

Method 1.


- 1) Press an empty space on background screen for one second.



- 2) Press register IoT Device

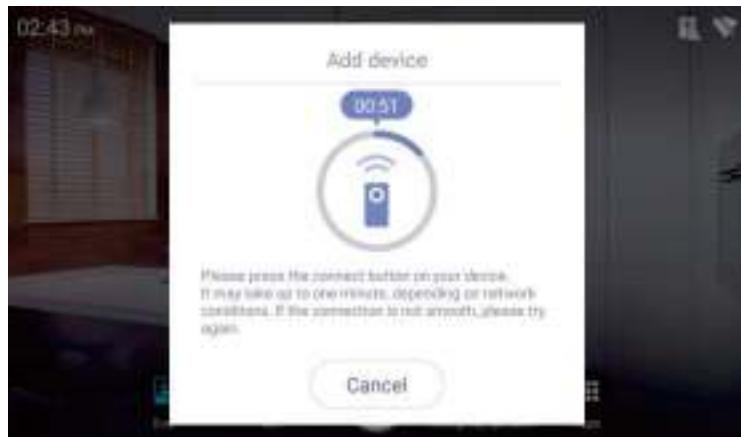

- 3) Connect the device according to the device pairing method..
- 4) The device can be paired for up to 60 seconds.
- 5) Press Cancel 'button to cancel the device pairing method.
- 6) When a device is registered, the device is automatically placed on the screen

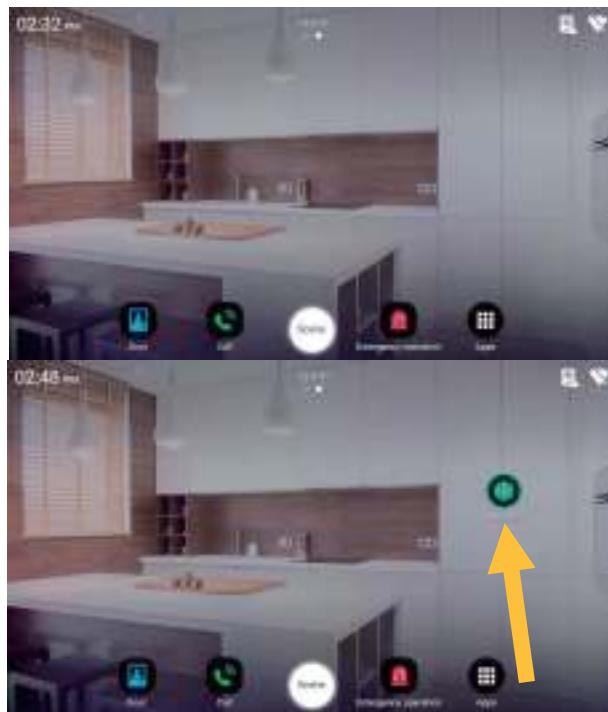


Method 2.

- 1) Drag or click IoT Device ICON leftside on screen



- 2) Click IoT Pairing ICON on upside and drag center on screen.

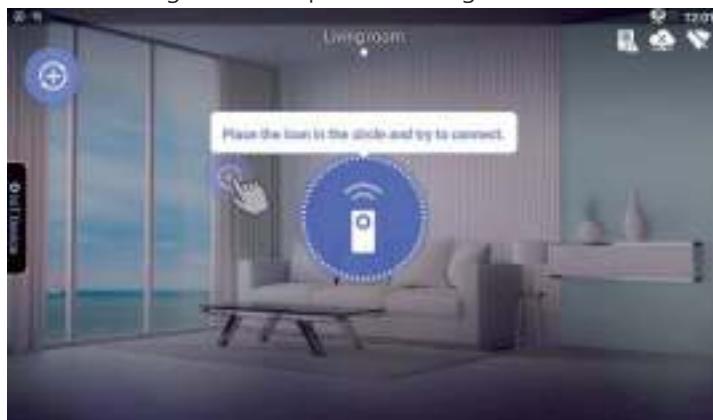

- 3) Connect the device by using device pairing method.




2.3. Placing device (move / delete)

Method1.

- 1) Press an empty space on background screen for one second




- 2) Press 'Device icon placement'.
- 3) You can move to the desired location by pressing the device you want to move.

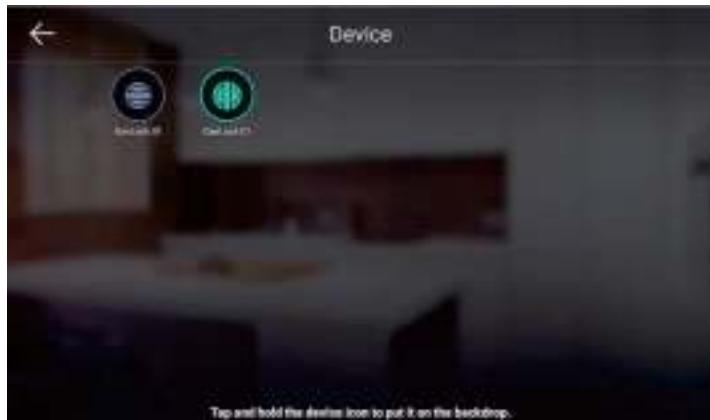

- 4) Drag the device, move it to the desired location, and release the device
- 5) To delete a device, press the corresponding icon longer to move to the desired location..




- 6) To delete a device, press the icon longer and move it to the upper trash...

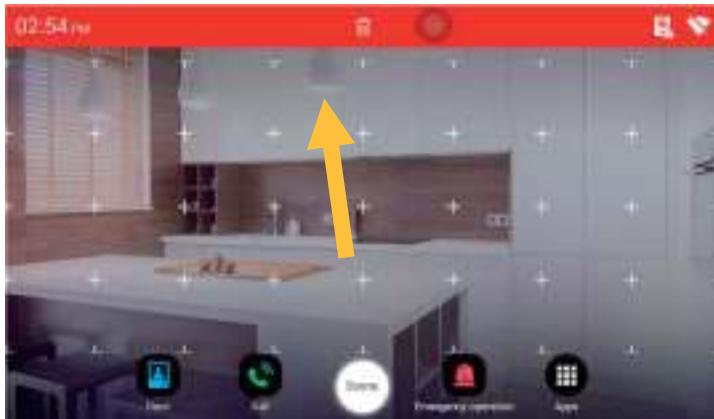


[Device delete screen]

Method 2.

- 1) Drag or click IoT Device ICON leftside on screen

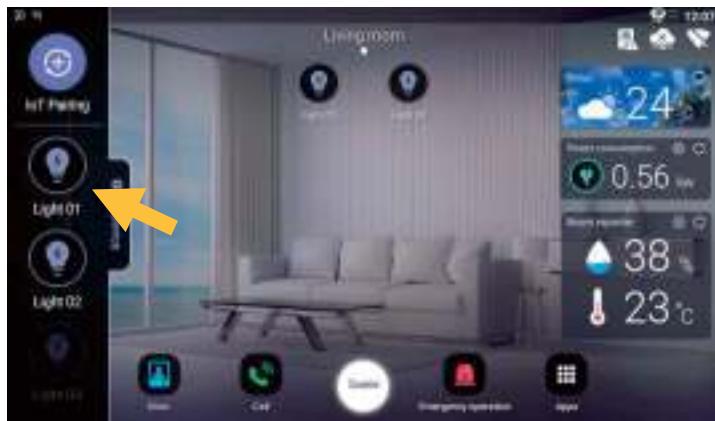

- 1) You can move to the desired location by pressing the device you want to move.

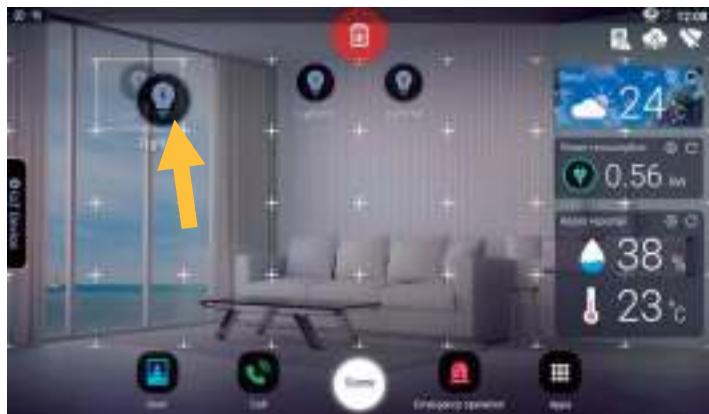

- 2) To delete a device, press the icon longer and move it to the upper trash...



2.4. Controlling devices


- 1) Move to the space to control.
- 2) You can turn the device on / off by pressing the device you want to control..



[The device control screen]

2.5. Widget Area


- 1) Provide a summary of our home environment and external environment information at present..
- 2) Press empty space on background screen for one second.

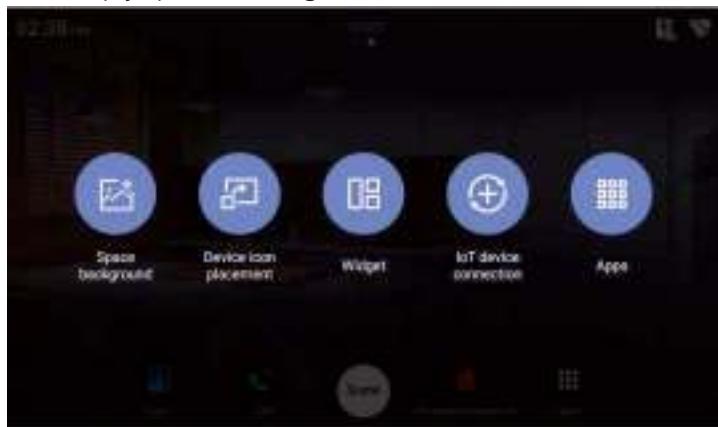

- 3) Press widget .
- 4) Select and drag the widget you want to display on the background



- 5) To delete a widget, press the widget longer and move it to the upper trash.

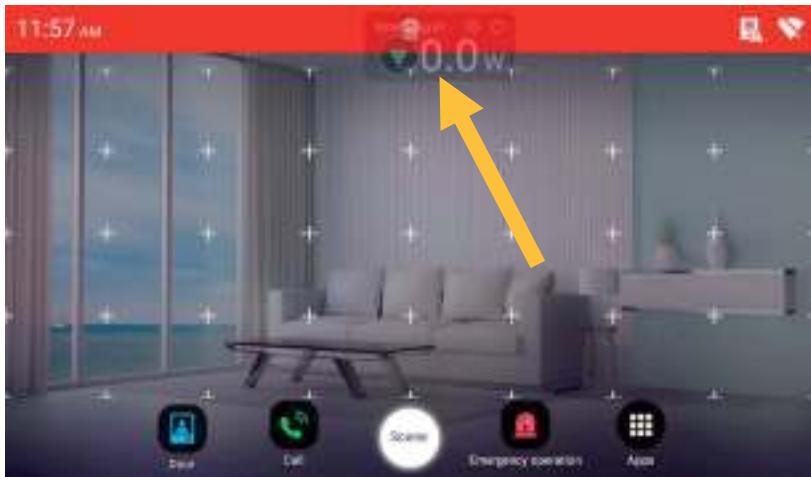

3 House Reporter

We provide value information on the screen that allows us to understand our home environment and external conditions..



[The house reporter screen]

3.1. Edit house reporter

- 1) Press edit "buttonu
- 2) Press the "(On / Off)" button and you can select the value information item to be displayed..
- 3) OK "button to save the changed item.



[The house report edit screen]

3.2. Setting the weather area

- 1) 'Press the "Today's weather information" button.
- 2) Enter the name of the area to search.
- 3) Press the "Search" button..
- 4) Select one of areas from search list .



[The weather area setting screen]

4 Control

4.1. Control lighting

- 1) Go to the Lighting tab.
- 2) When you press power button of whole lightings, all lightings are turned on.
- 3) When you press power button of whole lightings, all lightings are turned off.
- 4) Press the power button of the lighting you want to control to turn the light on or off.



[Lighting Control Screen]

4.2. Multi-sensor

Checking multi-sensor


- 1) Go to the Indoor Environment tab.
- 2) Displays information collected in indoor environment by multi-sensor.



[Multi sensor Screen]

4.3. Magnetic sensor

- 1) Go to the Safety tab.
- 2) 'Detected' is displayed when door open is detected.
- 3) If no door open is detected, "No detected" is displayed.

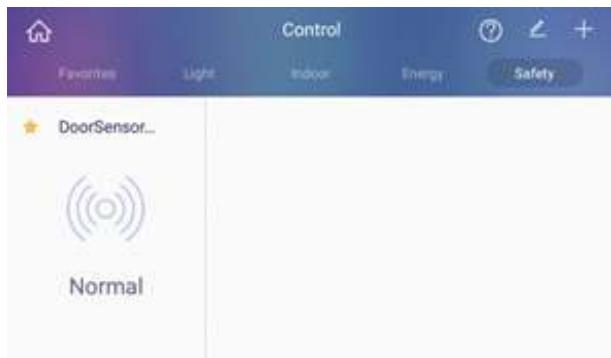


[Magnetic sensor Screen]


4.4. Adding devices

Control standby power

- ① Press the + button to enter the Add Device mode.
- ② Pairing mode is for 1 minute

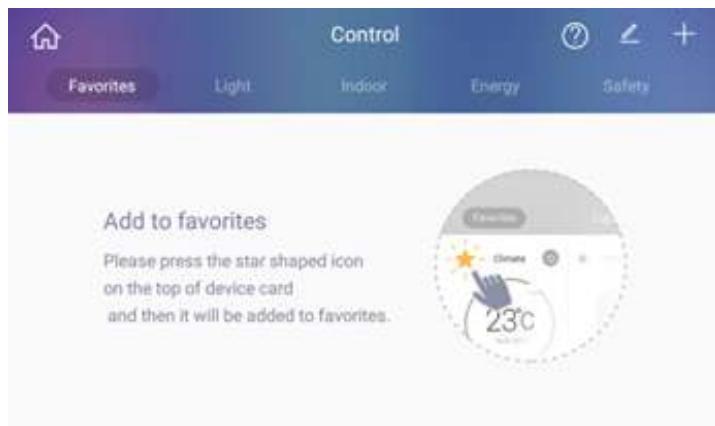

[Standby power Screen]

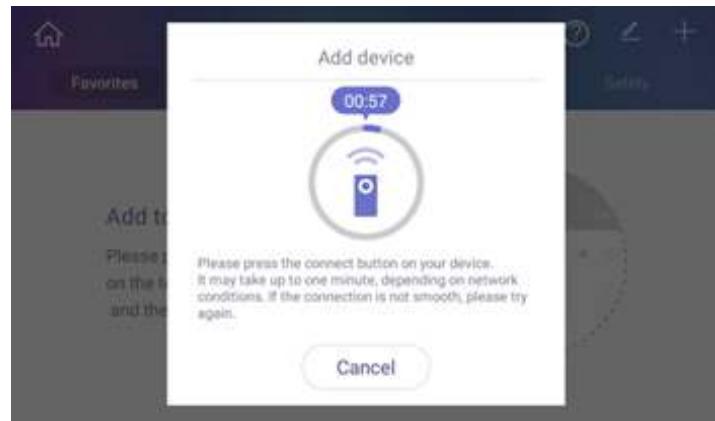

[Standby power Screen]

4.5. Edit device

Change the device nickname

- 1) Select the device and change the nickname.
- ① Press button and finish changing the nickname of the devices.



[Device edit Screen]

Remove device

- 1) Select the device you want to delete.
- 2) Press the ① button to complete the deletion of the devices.



[Remove device Screen]


5 Application

5.1. Interphone

5.1.1. Screen Layout




Call connection screen

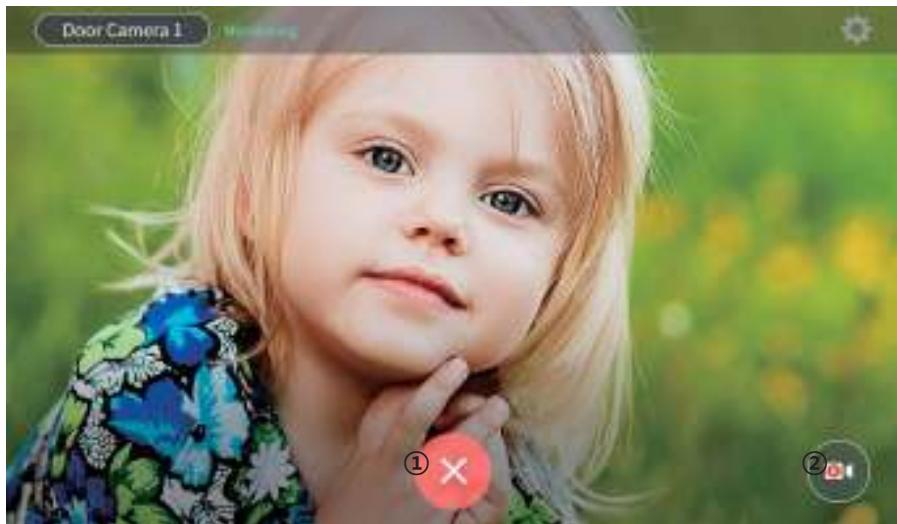

[Monitoring Screen]

- 1) Press ① button to end the door monitoring.
- 2) Press ② button to save video.

Call connection screen

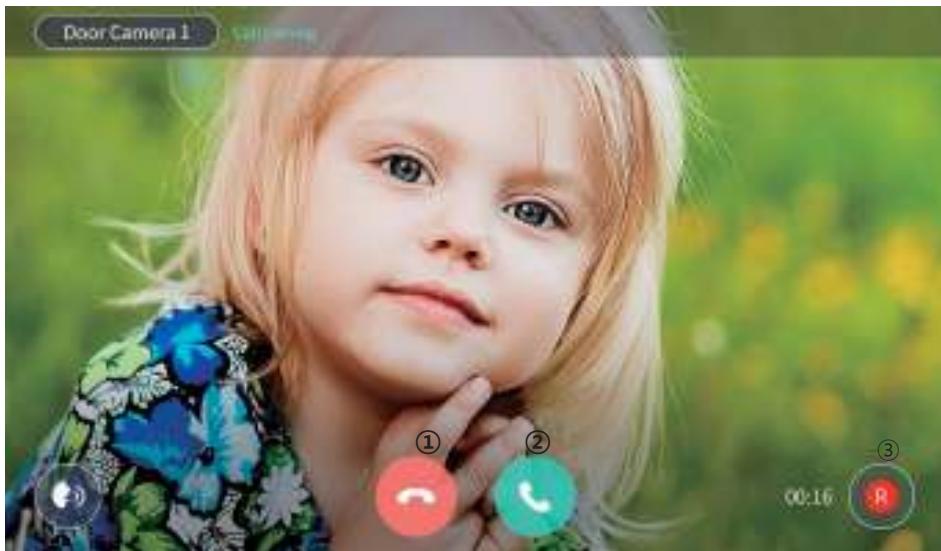

[Call connection Screen]

- 1) ① End call.
- 2) ② Start Call / Open Door
- 3) ③ Save video
- 4) ④ Adjust call volume

5.2. Door entrance

Monitor and call from door camera

- 1) Click on the door entrance icon in the Quick Menu.
- 2) You can monitor the door entrance by pressing the 'door entrance' button.
- 3) To cancel monitoring, click the 'Cancel' button.
- 4) When you press the bell on the door camera, the call screen appears..
- 5) To end the call, press the "End call" button.

Open the door


- 1) When the call comes in and the call button is pressed, the door open button appears.
- 2) Press the door open button to open the door.

Saving the image of our house / common entrance visitor

- 1) When you press the save video button during a call, the icon changes to  and video recording starts.
- 2) Once you click the save button again, the image will be saved.


Get a call on door camera

- 1) When you receive a call, the bell sound and visitor screen are displayed on the screen.
- 2) Press the (Talk) button to connect the call and press the "Reject" button to hang up.
- 3) To stop during a call, press the "Exit" button.
- 4) If you receive calls from two or more during the call, the screen will appear on the upper left corner and you will be connected immediately when you click on the screen..

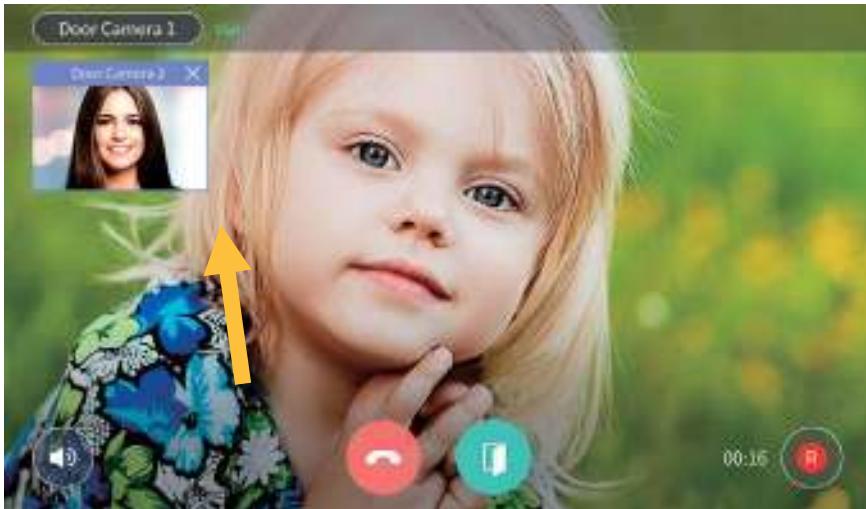

Call house

- 1) Press dial on background .
- 2) You can call by entering the number of building and household or pressing the button of guard station and office

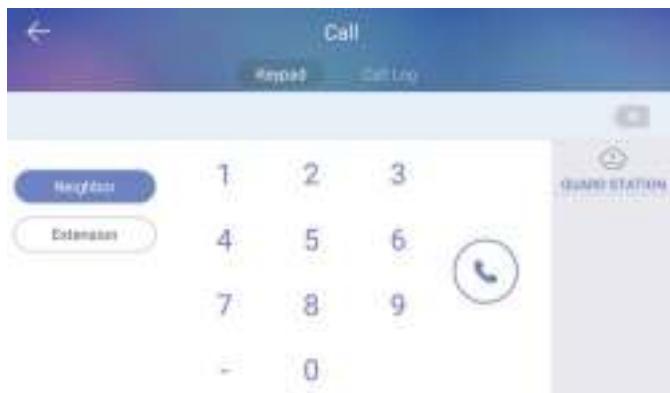

5.3. Call Log

The last 7 days		
	Door Camera	2017/01/02

[Display for Call log]

Using Call Log



- 1) When you click  icon at the top of screen, you can delete the call log.

5.4. Security

 monitoring	CCTV	CCTV monitoring and save the image
 emergency	Occur	Occur emergency on urgent situation

5.4.1. Security




Occur emergency
Detect emergency

The emergency has been activated by users or sensors automatically. Emergency situation will be operated with 3 steps(Occur → Stop → Restore).


5.4.2. Occur emergency

- 1) You can activated the emergency for clicking the emergency button. Also it can be operated by sensors automatically.
- 2) The siren will be activated and display the emergency icons.

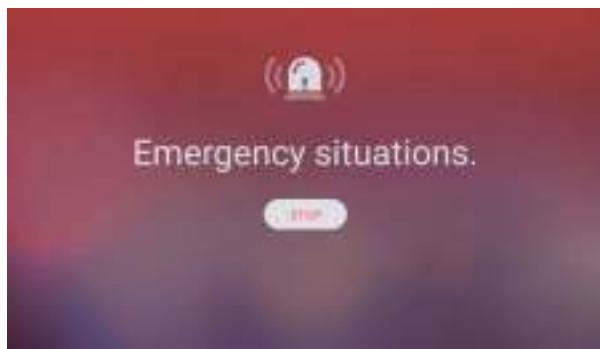

5.4.3. Stop emergency


- 1) Click the "Stop" button.
- 2) Click the password and "OK" button. (Password from factory : 1234)

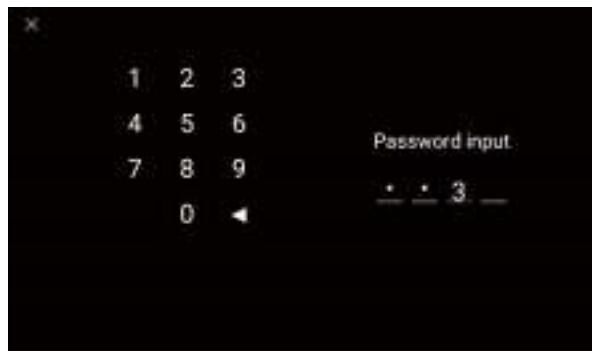

[Enter password]

5.4.4. Return emergency

- 1) Click the "Restore" button.
- 2) When you click it, the emergency will be disarmed.

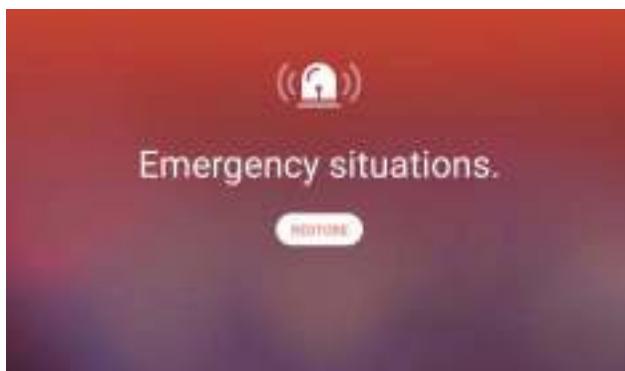

[Window for restoring emergency]

5.4.5. CCTV



Check the display of CCTV

Save the image of CCTV



[CCTV menu display]

① CCTV Display	⑤ Favorites
② Move to the next display	⑥ Seleted lists
③ Move to the previous display	⑦ List of favoirtes
④ Channal list	⑧ Check the saved image

CCTV monitoring & saving

- 1) Click the channel list(④) you can see the CCTV list(⑥) on the display.
- 2) Click the CCTV list, you can see the image of CCTV(①).
- 3) If you want to see the next CCTV, click the Next button(②).
- 4) If you want to see the previous CCTV, click the Next button(③).

Register, remove & check the favoirtes

- 1) Main display of CCTV, click the star icon next to the CCTV list, you can register or remove CCTV on the favorites list.
- 2) Click the list of favorites(⑤), you can check the favoirted CCTV list on the display.
- 3) The star of CCTV list(⑦) is on, you can remove on the favorite list for clicking the star(⑦) on the list.

5.5. Checking visitor

 Visitor	Check the saved image of entrance or lobby
---	--

5.5.1. Visitor



Check the saved image of entrance or lobby



[Display for saved image]

 Delete	Delete the saved image
--	------------------------

With icons, you can check the location of saved movie clip.

 Enterence	Movie clip from entrance
 Lobby	Movie clip from lobby
 Missed Call	Movie clip from missed call

Check the saved movie clip

You can check the time and date of saved movie clip from the entrance or lobby.

Delete the saved movie clip

- 1) Click the 'Delete' button.
- 2) Click the individual movie clip or "All movie clip" for the selection.
- 3) To un-select the movie clip, click that icon again.
- 4) Click "Delete" button to remove the movie clip.

5.5.2. Emergency log



Emergency log


Emergency Log	
	Emergency Restore
	Tuesday, February 28, 2017, 3:10 PM
	Emergency Stop
	Tuesday, February 28, 2017, 3:10 PM
	Emergency Occur
	Tuesday, February 28, 2017, 3:17 PM
	Emergency Restore
	Tuesday, February 28, 2017, 3:17 PM
	Emergency Stop
	Tuesday, February 28, 2017, 3:17 PM
	Emergency Occur
	Tuesday, February 28, 2017, 3:17 PM

[Display for emergency log]

Delete the emergency log

- 1) With "  " icon, you can delete the date of emergency log.

5.6. Etc App

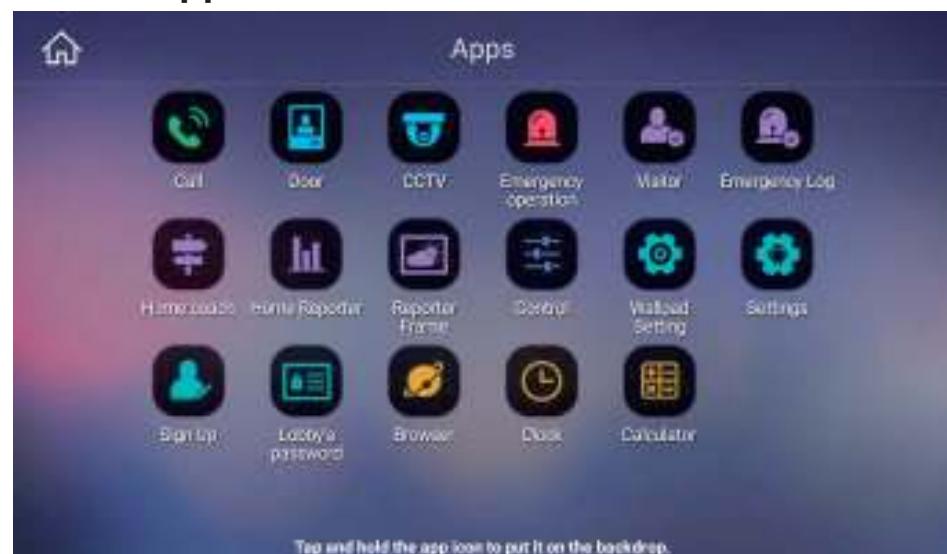

 Calculator	Calculation
 Clock	Set the alarm and time
 Sign up	Sign up / Edit / Initialization
 Wallpad setting	Setting for wallpad
 OS setting	Android setting
 Browser	Internet browser

5.6.1. Calculator

 


You can use it for calculation.



[Display for calculation]

5.6.2. Brower



This is the web brower for internet.



5.6.3. Sign up



Sign up / Edit / Initialization


- 1) Enter 'ID' and click 'Duplication check'.
- 2) Select the living country.
- 3) Enter 'Password', 'Retype Password' and click 'Registration'.



[Display for Sign-up]

Edit & Initialization

- 1) If you have already signed up, you can see the current ID on the display. You can change the password to click 'P/W change' button..
- 2) When you click 'Initialization', all your signed up information will be deleted

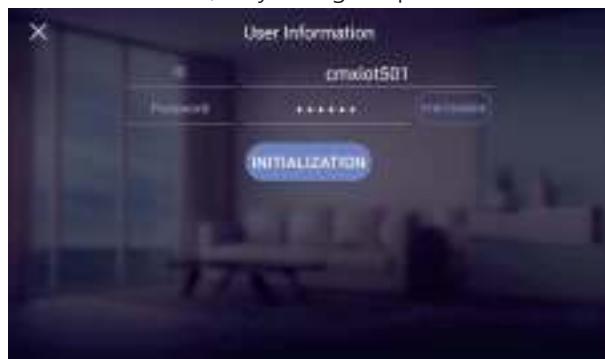

5.7. Wallpad setting

You can set the user information, wallpad, controlling devices, Door camera and other devices.

- 1) Click "Wallpad setting" icon, you can see the display.



5.7.1. Wallpad setting

You can set the SIP server, call number of guard station and passwords for wallpad.



* Wallpad type setting

- You can set wallpad using Maset or Slave
- If wallpad sets Slave, input IP of Master wallpad and select Slave number (501 ~ 510)
 - ※ If you are a member of COMMAX, you need to initialize the member information before setting it as Slave.
 - ※ After the setting of the month pad type is completed, it is automatically rebooted.

Note) a. When operating master and slave in the cab, make sure all the IP of the wall pad is set to fixed IP

(When set to DHCP, synchronization between master and slave may not be possible.)

B. When the slave malfunctions or power is off, communication delay between master and slave occurs and all devices may slow down

There is.

C. If the IP address of the slave is changed, be sure to reboot the master wall pad to synchronize the master / slave.

D. If changing the slave wall pad to Master, be sure to reboot the existing Master Wall Pad to synchronize Master / Slave

It will be canceled.

Wallpad type	
<input checked="" type="radio"/> Master	<input type="radio"/> Slave
Master wallpad IP localhost(Master)	
Extension number 100(Master)	

- 1) You can change the password for disarming emergency and Away mode.
 - Enter the new password.
 - Re-enter the same password.
 - If passwords are same, it has been changed.
※ Initial password is 1234.
- 2) You can change the building & household number.
※ If you change those number, you need to reboot the wallpad.
- 3) You can change the number for guard station.
- 4) You can change the SIP server IP.
※ If you change the IP, you need to reboot the wallpad.
- 5) You can change the update server IP for wallpad.
- 6) You can re-execute the installation wizard.

5.7.2. Initialization for connecting control devices

You can initialize the control devices for connecting wallpad or mobile app.



When you click the "Initialization" button, all the connecting IoT devices will be initialized. After initialization, individual devices can be controlled but all the scenario or scenes will be deleted.

5.7.3. Data initialization

You can initialize all the date from wallpad.



After initialization, you can not restore the data.

[List for initialization]

- Call log
- Saved image
- Saved movie clip
- Emergency log

5.7.4. Door camera setting


You can register IP door camera.



- 1) Click "Door Camera Setting", push the button of door camera for 5 seconds, the camera image will be displayed automatically.

The image shows a mobile application interface for managing door cameras. At the top, there is a close button (X) and a title 'Door Camera Register'. Below the title, there is a note: 'If you press bell button of door camera for 5 seconds, door camera information will be displayed.' Under this note, there is a section titled 'Found Door Camera' which lists 'Unregistered Door Camera 1' with the IP address '292.168.1.124'. At the bottom right, there is a 'Preview' button.

- 2) Click "Camera Preview", you can check the image of door camera.

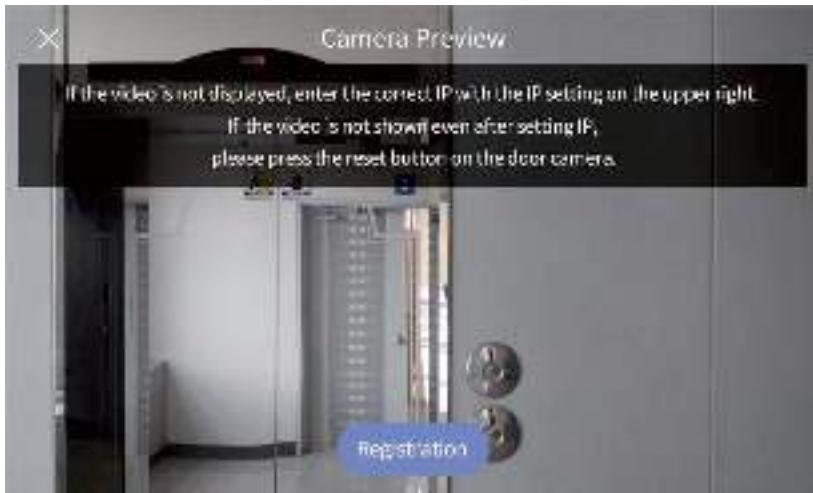

- 3) Click 'Registration' button, the door camera will be registered to wallpad automatically.
 - 4) You can change the name of door camera to click "Edit" button.


5.7.5. CCTV Registration

You can register IP type CCTV camera.

- 1) Click "CCTV camera register" button, you can see the list of CCTV camera on the display..



- 2) Click "Preview" button and enter the ID & Password, you can check the image of CCTV camera.

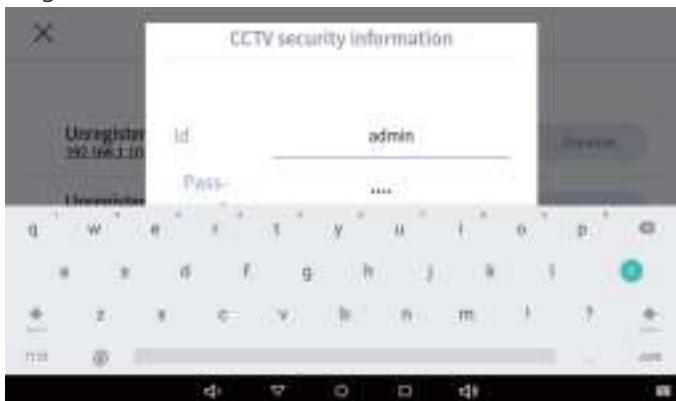



- 3) Click "Register" button, that CCTV camera will be registered.



- 4) Click "Edit" button, you can change the name of CCTV camera.



5.7.6. Call setting

You can adjust the calling functions.




The menu is as below.

- 1) Continuous call time : You can select the call time between 30 sec ~ 3 min.
- 2) Video recording time : You can select the recording time between 10 sec ~ 60 sec.

- 3) Video auto save: When you select it, video clip will be saved automatically
Video clip will be saved on your app.
- 4) Allow smartphone incoming call : When you select it, you can receive the call from the visitors to your smart phone.


5.7.7. Setting for Home Theme

You can set the home theme.

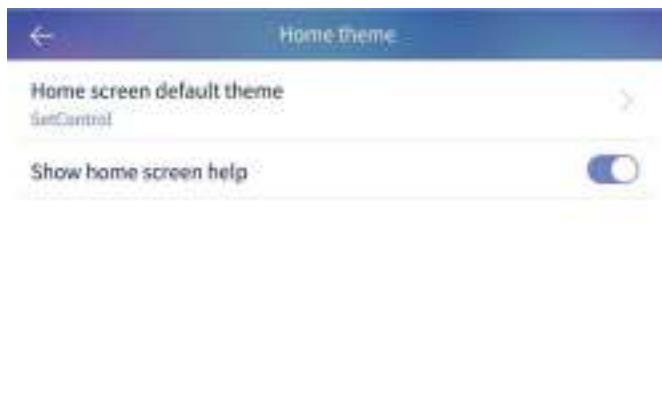

5.7.8. Ringtone

You can select the ringtone from connected devices.

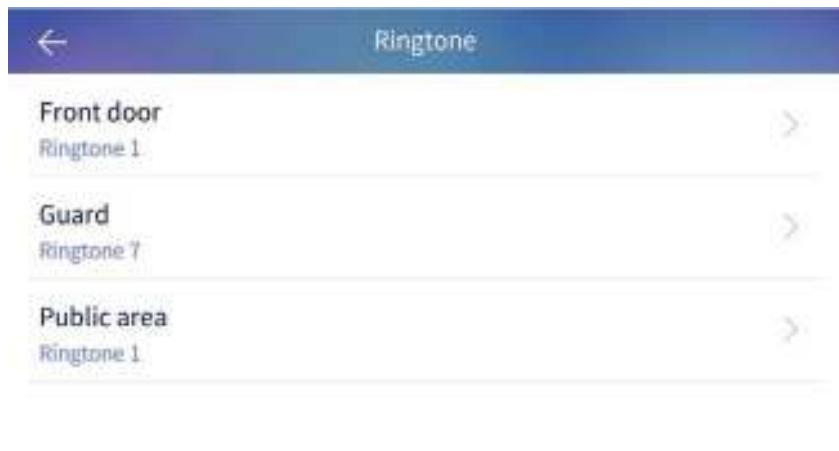

- 1) Select the place and select the ringtone. (Preview for ringtone)
- 2) Click the 'Confirm' button, the ringtone has been selected.



5.7.9. Wallpad information

You can check the information of systems such as versions of S/W.



5.7.10. Check the version of application

- 1) Click "Application" button.
- 2) The version of app will be displayed.




5.7.11. Touch keypad sensitivity

You can control sensitivity of keypad, if product has touch keypad.



6 Scene / Booking control

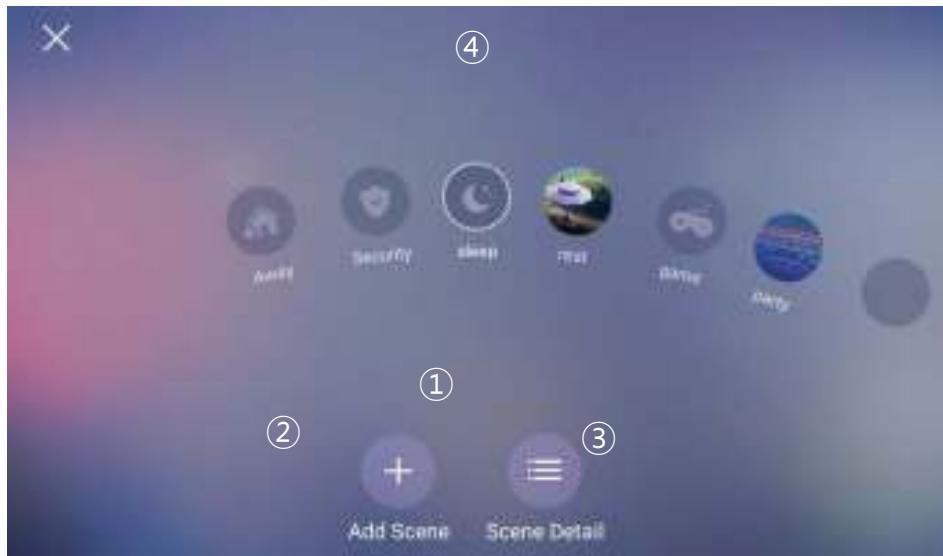

[Main display of Scene / Scenario menu]


① Move to Home display	③ Detail of Scene
② Add Scene	④ Quick move to scenario control

6.1.1. Add Scene

- 1) In the menu, click the 'Add scene' button.
- 2) Click 'Create the scene with selected device' button, you can see the selection of device window.
- 3) Selected device and click 'Confirm' button.
- 4) Select the details for devices.
- 5) Click '+' button for entering name & icon.



[Display for device setting]

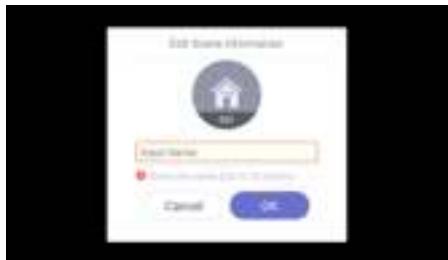

[Display for name & icon]

6.1.2. Away mode



Activate & Deactivate the away mode

Display for away mode status

You can set the sensors, saving visitor image, turn-off the light or bypass the call in the away mode..

Activate the away mode

- 1) Click the away mode icon.
- 2) After the curtain time, the away mode will be activated.
- 3) If you cancel the away mode, click "Close" button.



[Display for away mode]

① Lead time for Away mode	② Start the away mode
③ List for activation with away mode	

※ Away mode will not be activated during the setting of security.

※ Lead time for away mode can be set in the menu of 'Away mode setting → Option → Lead time for Away mode'.

Setting for Away mode

- 1) Setting the activating functions in away mode.
- 2) Click "Option" button, the setting menu will be displayed.
- 3) Check for using sensors or other functions.
- 4) Click 'Confirm' button for saving.



[Setting display for away mode]

Disarm for away mode

- 1) Click away mode icon in home display.
- 2) Enter the password and click 'Confirm' button.
- 3) If the password is correct, the away mode will be disarmed.

6.1.3. Security



Arm / Disarm the security

Display the status of security sensor

- ※ This function will be activated when the sensors are installed in the house.
- ※ You can choose the usage of sensors in the menu of [Setting → Signal → Usage of sensor].

Set the security

- 1) Check the security sensor in 'Security area (②)' button.
- 2) Activate the selected area to click 'Confirm(①)' button.





[Display for security setting]

- ※ The list of sensor will be displayed which has connected with wallpad.

Disarm the security

- 1) Click 'Security setting' button.
- 2) Enter the password and click "Confirm".
- 3) If the password is correct, the selected sensors will be disarmed.

6.1.4. Scene control

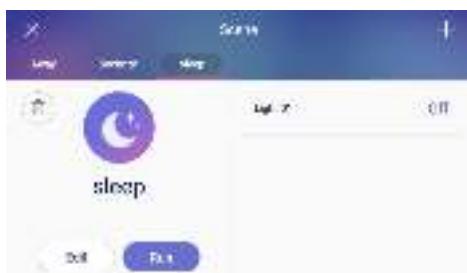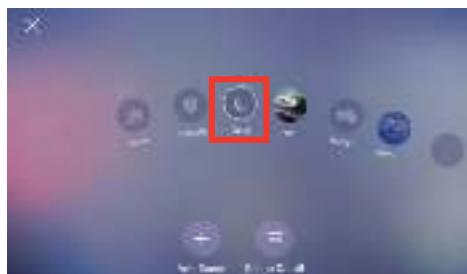

- 1) Click the scene among the list.
- 2) All the devices will be operated belongs to its scene.
- 3) Click 'Details' in the main menu.
- 4) All the devices will be operated to click 'Apply' button.

6.1.5. Edit Scene



- 1) Click 'Security: Applying>' button, you can arm / disarm the security while you activate the curtain scene.
- 2) Click 'Edit' button, you can edit the scene.
- 3) In the editing display, you can edit the kinds of device, name of scene or icon.


6.1.6. Setting the scenario(Mode)

You can control the devices under the setting of scenario..


Ex.) Turn-on the Lighting when disarming the away mode

※ **It may take 1 to 5 min due to server condition.**

6.1.7. Adding scenario control

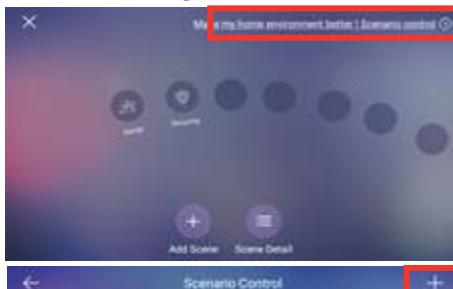


1) Click "Control the scenario" button at the right-top of display.

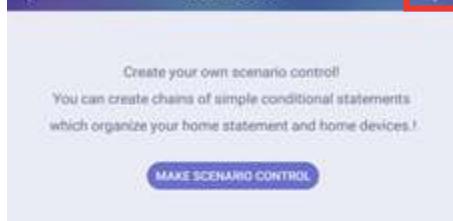

2) Click '+' or 'Create new scenario' button.



3) Click '+' button at the Condition window.

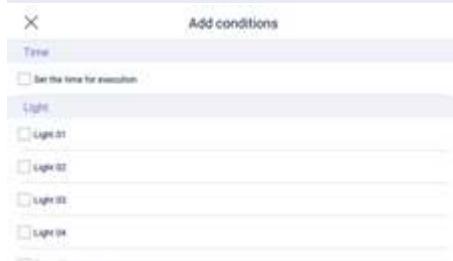

4) Select the devices.

- 5) Select the options of device.
- 6) Click '✓' button for the saving.
- 7) 'Activation' will be set as same as 'Condition'.
- 8) When the setting of "Condition" and "Activation" is completed, click the '✓' button for saving.
- 9) You can see the created scenario.

7.2.1. Setting for the booking

- 1) Move to Booking window.
- 2) On the list, you can activate the options using toggle buttons ('').


PRODUCT

SPEC	MODLE
LINE	UTP (CAT.5e)
VOLTAGE	INPUT : PoE DC 36V ~ 54V / DC5V
POWER	STANDBY :5W , MAX :10W
TELECOMUNNICATION	AUDIO : VoIP, VIDEO : H.264, H.265
LINE & DISTANCE	STANDARD UTP (CAT.5e) 70m (FROM THE PSE)
TEMPERATURE	0°C ~ +40°C


SPECIFICATION

CPU	Quad-Core ARM Cortex-A53
MEMORY	1G DDR3 RAM (512M *2)
FLASH	8G eMMC Flash
LCD	7" TFT LCD, 1024 x 600
POWER	PoE

INSTALLATION

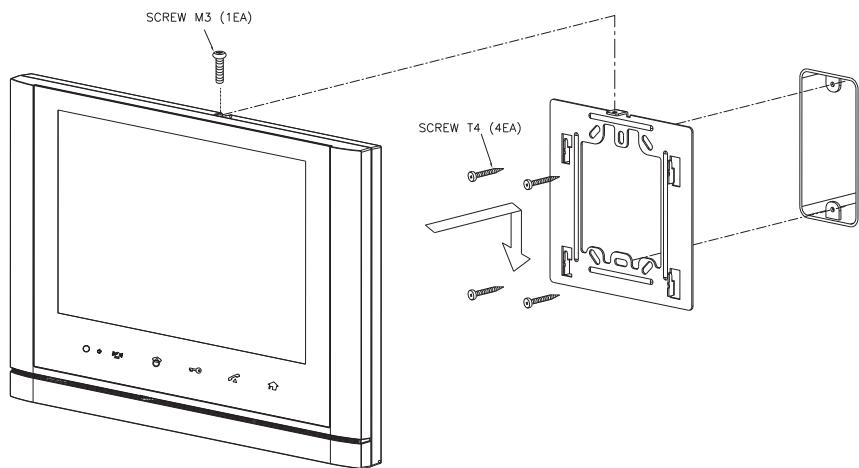

PACKAGE CONTENTS.

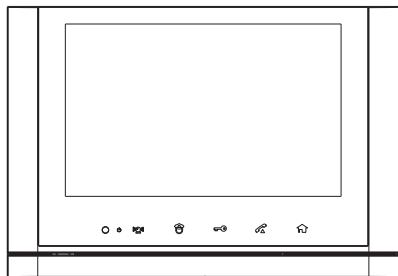

CIOT-1020M



Bracket for wall mount



Manual



T4 X 18(4EA)
Screw for wall mount



M3 x 6(1EA)
Screw for body



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea

Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133

Web site : www.commax.com

PM491020M010

Printed In Korea / 2016.03.104